

Limits of Warranty:

Warranty coverage does not include the following:

- A faulty product that leads to harm or damage to other products
- Damage of product as a result of other product components
- Incorrect method of operation or use of product not for intended use
- Any form of alteration to original product
- Inability to install the product as a result of incompatibility with other components.

The Specifications are subject to change without notice.

Disclaimer:

In no event shall GELID Solutions its directors or employees be liable for any indirect damages, incidental or consequential damages arising from any defect or error in this manual or product.



©Copyright 2020 All rights reserved by GELID Solutions Limited
All Brand names and Trademarks are the properties of their respective owners.

Please consult our website for further information:

www.gelidsolutions.com

VOCE USB Condenser Microphone Instruction Manual



HOW TO CONNECT:

1. Plug the USB cable into an USB 2.0 Port.
2. No driver package is required, just wait until the microphone is detected by your software, and it's ready to use!

SPECIFICATIONS:

Frequency (Hz)	20-20000
Input Power	USB DC 5V
Polar Pattern	Cardioid
Resistance (Ω)	2.2k
Sensitivity (dB)	-34 \pm 2
Signal-to-Noise Ratio (dB)	78
System Requirements	USB 2.0 Interface; Windows and Mac compatible

SETUP PROCEDURES:

1. Mount the table clamp to the side of a desk, tighten the screw until it is fixed.
2. Insert the suspension arm to the table clamp and tighten the knob.
3. Insert the microphone holder to the suspension arm.
4. Screw-in the VOCE microphone onto the holder; put the windshield on if needed.
5. Mount the pop filter to the suspension arm, adjust position so that it is levelled in front of the VOCE microphone.

