


QUICK START GUIDE

A Installation Parts

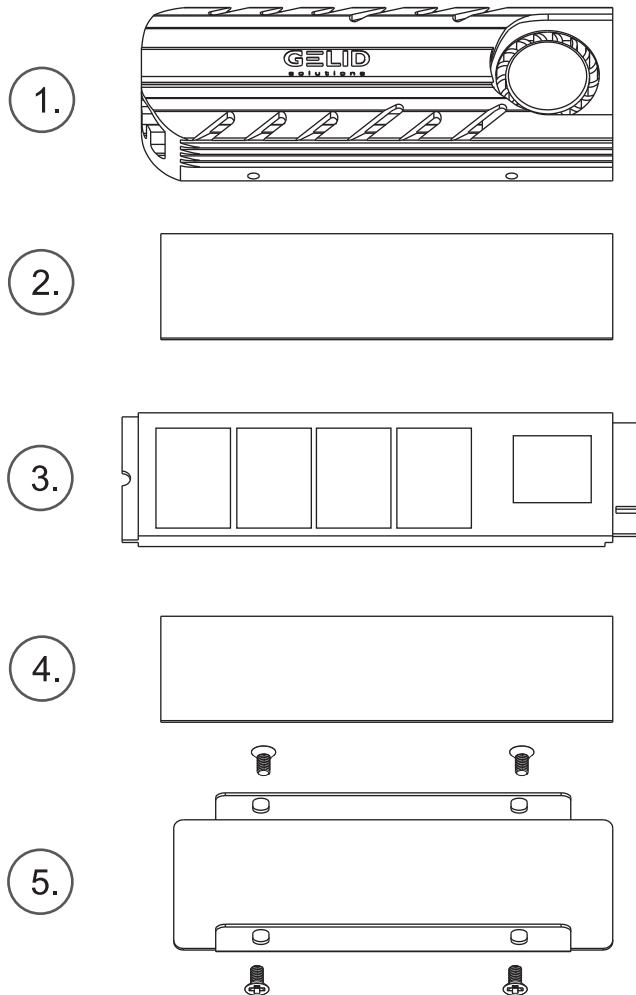

B Installation Instructions

1. Peel off the protective film and apply the (2) Thermal Pad onto the top of your (3) M.2 Type 2280 SSD.
2. Peel off the protective film and apply the (4) Thermal Pad into the inner surface of the (5) bottom.
3. Attach the (1) Heatsink on top of your M.2 Type 2280 SSD.
4. Align the position and put it into inner surface of the (5) bottom.
5. Fasten the 4 screws to assembly the cooler.
6. Plug in the 4 Pin PWM Connector into 4 Pin PWM Socket of your motherboard.

Limits of Warranty:

Warranty coverage does not include the following:

- A faulty product that leads to harm or damage to other products
- Damage of product as a result of other product components
- Incorrect method of operation or use of product not for intended use
- Any form of alteration to original product
- Inability to install the product as a result of incompatibility with other components.

The Specifications are subject to change without notice.

Please consult our website for further information:

www.gelidsolutions.com

Disclaimer:

In no event shall GELID Solutions its directors or employees be liable for any indirect damages, incidental or consequential damages arising from any defect or error in this manual or product.