


QUICK START GUIDE

A Installation Parts

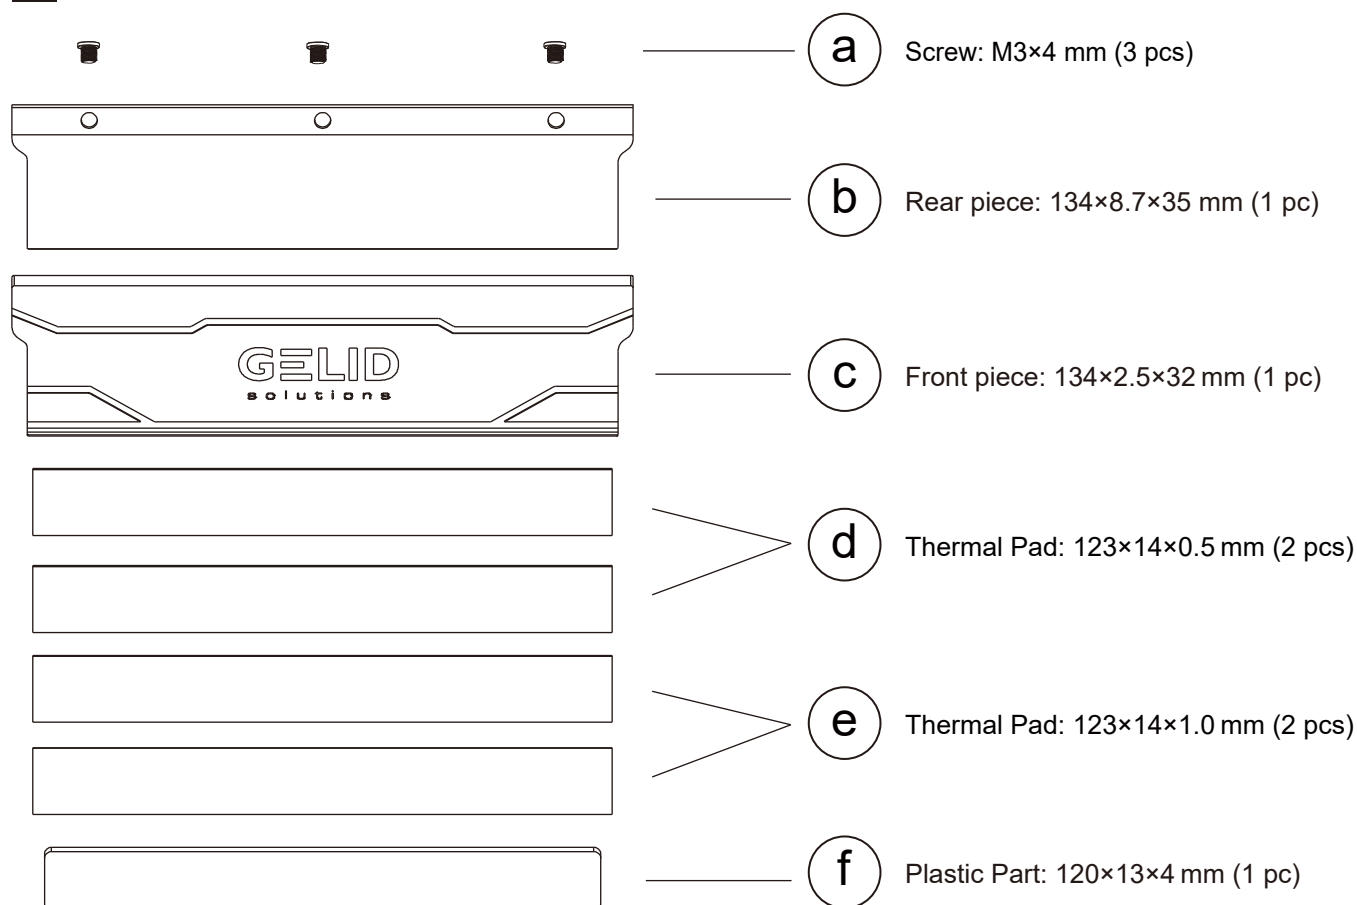

B Installation Instructions

1. Peel off the protective films and apply the appropriate thermal pad (see steps 1a and 1b) to both sides of the DDR.
 - 1a. Double-sided DDR: Select two pieces of (d) 0.5 mm thermal pads.
 - 1b. Single-sided DDR: Select two pieces of (e) 1.0 mm thermal pads.
2. Mount your DDR module assembly with thermal pads onto the (c) front piece of the IceROCK 2.0.
3. Align the (c) front piece of the IceROCK 2.0 with the (b) rear piece.
4. Fasten the three (a) screws to secure the cooler.

* Installation Instructions (low-profile DDR)

For low-profile DDR, select option (f): Peel off the protective film, attach component (f) to the inner top side of part (c) of the IceROCK 2.0, then repeat steps 1, 2, 3, and 4.

Limits of Warranty:

Warranty coverage does not include the following:

- A faulty product that leads to harm or damage to other products
- Damage of product as a result of other product components
- Incorrect method of operation or use of product not for intended use
- Any form of alteration to original product
- Inability to install the product as a result of incompatibility with other components.

The Specifications are subject to change without notice.
Please consult our website for further information:

www.gelidsolutions.com

Disclaimer:

In no event shall GELID Solutions its directors or employees be liable for any indirect damages, incidental or consequential damages arising from any defect or error in this manual or product.

© Copyright 2026 All rights reserved by GELID Solutions Limited
All Brand names and Trademarks are the properties of their respective owners.

